







TE 500-AVR

en	Original operating instructions	1
he	הוראות הפעלה מקוריות	10



Original operating instructions

1 Information about the operating instructions

1.1 About these operating instructions

- Warning! Read and understand all accompanying documentation, including but not limited to instructions, safety warnings, illustrations, and specifications provided with this product. Familiarize yourself with all the instructions, safety warnings, illustrations, specifications, components, and functions of the product before use. Failure to do so may result in electric shock, fire, and/or serious injury. Save all warnings and instructions for future reference.
- **Initial** products are designed for professional users and only trained, authorized personnel are permitted to operate, service and maintain the products. This personnel must be specifically informed about the possible hazards. The product and its ancillary equipment can present hazards if used incorrectly by untrained personnel or if used not in accordance with the intended use.
- The accompanying documentation corresponds to the current state of the art at the time of printing. Please always check for the latest version on the product's page on Hilti's website. To do this, follow the link or scan the QR code in this documentation, marked with the symbol (S).
- Ensure that these operating instructions are with the product when it is given to other persons.

1.2 Explanation of symbols

1.2.1 Warnings

Warnings alert persons to hazards that occur when handling or using the product. The following signal words are used:

A DANGER

DANGER !

> Draws attention to imminent danger that will lead to serious personal injury or fatality.

A WARNING

WARNING !

Draws attention to a potential threat of danger that can lead to serious injury or fatality.

CAUTION !

Draws attention to a potentially dangerous situation that could lead to personal injury or damage to the
equipment or other property.

1.2.2 Symbols in the operating instructions

The following symbols are used in these operating instructions:

₿	Comply with the operating instructions
i	Instructions for use and other useful information
	Dealing with recyclable materials
X	Do not dispose of electric equipment and batteries as household waste

1.2.3 Symbols in illustrations

The following symbols are used in illustrations:

2	These numbers refer to the illustrations at the beginning of these operating instructions.
3	The numbers in illustrations refer to important work steps or to components important for the work steps. In the text, the corresponding numbers draw attention to these work steps or components, e.g. (3) .



(11)	Item reference numbers are used in the overview illustration and refer to the numbers used in the key in the product overview section.
•	This symbol is intended to draw your special attention to certain points for handling the product.

1.3 Explanation of signs used

1.3.1 Symbols on the product

The following symbols are used on the product:

T	Chiseling
-9-	Chisel positioning
	Protection class II (double-insulated)
n ₀	Rated speed under no load
	Wear protective gloves

2 Safety

2.1 General power tool safety warnings

WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- ► Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.





- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the
 power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- Keep handles and grasping surfaces dry, clean and free from oil and grasse. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

Service

 Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

2.2 Hammer safety warnings

Safety instructions for all operations

- Wear ear protectors. Exposure to noise can cause hearing loss.
- Use auxiliary handle(s), if supplied with the tool. Loss of control can cause personal injury.
- Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring or its own cord. Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.

2.3 Additional safety instructions

Personal safety

- Use the tool only when it is in technically faultless condition.
- Never tamper with or modify the tool in any way.
- Apply appropriate safety measures at the opposite side of the workpiece in work that involves breaking through. Parts breaking away could fall out and / or fall down causing injury to other persons.
- Always hold the power tool with both hands on the grips provided. Keep the grips clean and dry.
- Always grip the side handle at its outermost end.
- Wear suitable protective glasses, a hard hat, ear protection, protective gloves and light respiratory
 protection while using the tool.



- Wear protective gloves also when changing the accessory tool. Touching the accessory tool presents a risk of injury (cuts or burns).
- ▶ Wear eye protection. Flying fragments present a risk of injury to the body and eyes.
- Before beginning the work, check the hazard classification of the dust that will be produced. Use an
 industrial vacuum cleaner with an officially approved protection classification in compliance with locally
 applicable dust protection regulations.
- Use a dust removal system and suitable vacuum cleaner whenever possible. Dust from materials, such as paint containing lead, some wood species, concrete/masonry/stone containing silica, and minerals as well as metal, may be harmful.
- Make sure that the workplace is well ventilated and, where necessary, wear a respirator appropriate for the type of dust generated. Contact with or inhalation of the dust may cause allergic reactions and/or respiratory or other diseases to the operator or bystanders. Certain kinds of dust are classified as carcinogenic such as oak and beech dust, especially in conjunction with additives for wood conditioning (chromate, wood preservative). Material containing asbestos may be handled only by specialists.
- Take breaks between working and do physical exercises to improve the blood circulation in your fingers. Exposure to vibration during long periods of work can lead to disorders of the blood vessels and nervous system in the fingers, hands and wrists.

Electrical safety

 Before beginning work, check the working area for concealed electric cables or gas and water pipes. External metal parts of the power tool may become live, presenting a risk of electric shock, if you damage an electric cable accidentally.

Careful handling and use of power tools

- Switch the power tool off if the accessory tool sticks and stalls. The power tool may be deflected laterally.
- Wait until the power tool stops completely before you lay it down.

3 Description

3.1 Overview of the product 1



- Chuck
- Function selector switch
- ③ Control switch
- ④ Control switch lock
- 5 Side handle
- 6 Knob
- Service indicator
- 8 Lockbutton
- ④ Connector on electric tool
- 10 Supply cord with keyed, releasable plug connector

3.2 Intended use

The product described is an electrically powered breaker. It is designed for medium-duty chiseling work on masonry and concrete.

 Operation is permissible only when connected to a power source providing a voltage and frequency in compliance with the information given on the type identification plate.





3.3 Active Vibration Reduction (AVR)

The breaker is equipped with an Active Vibration Reduction (AVR) system, which greatly reduces vibration.

3.4 Possible misuse

- This product is not suitable for working on hazardous materials.
- · This product is not suitable for working in a damp environment.
- This product may not be connected to a power source providing a voltage and frequency not in compliance with the information given on the type identification plate.

3.5 Service indicator

The breaker is equipped with a service indicator LED.

Status	Meaning
The service indicator lights.	End of service interval – servicing is due.
The service indicator blinks.	The product is faulty. Have the product repaired by Hilti Service.

3.6 Items supplied

Breaker, side handle, operating instructions.



Other system products approved for use with this product can be found at your local **Hilti Store** or at: **www.hilti.group**

4 Technical data

4.1 Breaker

For details of the rated voltage, frequency, current and input power, please refer to the power tool's country-specific type identification plate.

When powered by a generator or transformer, the generator or transformer's power output must be at least twice the rated input power shown on the rating plate of the power tool. The operating voltage of the transformer or generator must always be within +5% and -15% of the rated voltage of the power tool.

	TE 500-AVR
Product generation	03
Weight in accordance with EPTA procedure 01	6.3 kg

4.2 Noise information and vibration values

The sound pressure and vibration values given in these instructions were measured in accordance with a standardized test and can be used to compare one power tool with another. They can also be used for a preliminary assessment of exposure.

The data given represent the main applications of the power tool. However, if the power tool is used for different applications, with different accessory tools, or is poorly maintained, the data can vary. This can significantly increase exposure over the total working period.

An accurate estimation of exposure should also take into account the times when the power tool is switched off, or when it is running but not actually being used for a job. This can significantly reduce exposure over the total working period.

Identify additional safety measures to protect the operator from the effects of noise and/or vibration, for example: maintaining the power tool and accessory tools, keeping the hands warm, organization of work patterns.

Detailed information on the versions of the **EN 62841** standards applied here is to be found in the reproduction of the declaration of conformity 20.





Noise emission values

	TE 500-AVR
Sound power level (L _{wa})	104 dB(A)
Uncertainty for the sound power level (K _{wA})	3 dB(A)
Sound pressure level (L _{pA})	96 dB(A)
Uncertainty for the sound pressure level (K_{PA})	3 dB(A)

Total vibration

Chiseling (a _{h,Cheq})	8.2 m/s ²
Uncertainty (total vibration)	1.5 m/s ²

5 Operation

5.1 Preparations at the workplace

Risk of injury! Inadvertent starting of the product.

Unplug the supply cord before making adjustments to the power tool or before changing accessories.

Observe the safety instructions and warnings in this documentation and on the product.

5.1.1 Fitting the side handle 2

Risk of injury! Loss of control over the breaker.

- Check that the side handle is fitted correctly and tightened securely.
- 1. Slide the side handle clamping band over the chuck from the front and into the recess provided.
- 2. Bring the side handle into the desired position.
- 3. Secure the side handle by turning the knob until the clamping band is tight.

5.1.2 Connecting the detachable supply cord

Risk of injury! Due to leakage current as a result of dirty contacts.

- Connect the detachable electric connector to the electric tool only when it is clean and dry and when the supply cord is unplugged from the power outlet.
- 1. Push the keyed, detachable electric plug connector into the socket as far as it will go, until it is heard to engage.
- 2. Plug the supply cord into the power outlet.

5.1.3 Fitting / removing the accessory tool

WARNING

Risk of injury! The tool becomes hot as a result of use.

- Wear protective gloves when changing the tool.
- 1. Apply a little grease to the connection end of the accessory tool.
- 2. Push the accessory tool into the chuck as far as it will go (until it engages).
- The product is ready for use.
- 3. Pull the chuck back as far as it will go and remove the accessory tool.



Use only the recommended grease supplied by **Hilti**. Use of unsuitable grease may cause damage to the product.







5.1.4 Positioning the chisel 4

Risk of injury! Loss of control over the chisel direction.

 Do not operate the tool when the selector switch is set to "Chisel positioning". Turn the function selector switch until it engages in the "Chiseling" position.



The chisel can be adjusted to 24 different positions (in 15° increments). This ensures that flat chisels and shaped chisels can always be set to the optimum working position.

- 1. Set the function selector switch to the -9- position.
- 2. Rotate the chisel to the desired position.
- 3. Engage the function selector switch in the T position.
 - The tool is ready for use.

5.1.5 Disconnecting the detachable supply cord

- 1. Unplug the supply cord from the power outlet.
- 2. Press the release button and pull the keyed, detachable electric plug connector out of the socket.
- 3. Pull the supply cord connector out of the power tool.

5.2 Types of work

A WARNING

Risk of electric shock! Severe injury and burns can result if any attempt is made to operate the tool without an earth/ground conductor and ground fault circuit interrupter correctly connected.

- Irrespective of whether mains power or generator power is used, always make sure that an earth/ground conductor and ground fault circuit interrupter are present in the power supply and that these are correctly connected.
- ▶ Do not use the product unless these safety measures are in place and fully operational.

WARNING

A damaged supply cord presents a hazard! Do not touch the supply cord or extension cord if damaged while working. Disconnect the supply cord plug from the power outlet.

 Check the appliance's supply cord at regular intervals and have it replaced by a qualified specialist if found to be damaged.

Full approval must be obtained from the site engineer or architect prior to beginning the work.

5.2.1 Chiseling 5

Set the function selector switch to the T position.

5.2.2 Switching sustained operation on and off 5



When chiseling, the on/off switch can be locked in the "on" position.

- 1. Push the lockbutton for continuous operation forward.
- 2. Press the on/off switch as far as it will go.
 - The product then runs in sustained operating mode.
- 3. Push the lockbutton for continuous operation back.
 - The product switches off.





6 Care and maintenance

🛕 WARNING

Electric shock hazard! Attempting care and maintenance with the supply cord connected to a power outlet can lead to severe injury and burns.

Always unplug the supply cord before carrying out care and maintenance tasks.

Care

- · Carefully remove stubborn dirt from the tool.
- · Clean the air vents carefully with a dry brush.
- Use only a slightly damp cloth to clean the casing. Do not use cleaning agents containing silicone as they can attack the plastic parts.

Maintenance

A WARNING

Danger of electric shock! Improper repairs to electrical components may lead to serious injuries including burns.

- Repairs to the electrical section of the tool or appliance may be carried out only by trained electrical specialists.
- Check all visible parts and controls for signs of damage at regular intervals and make sure that they all function correctly.
- Do not operate the product if signs of damage are found or if parts malfunction. Have it repaired immediately by Hilti Service.
- · After cleaning and maintenance, fit all guards or protective devices and check that they function correctly.

To help ensure safe and reliable operation, use only genuine Hilti spare parts and consumables. Spare parts, consumables and accessories approved by Hilti for use with the product can be found at your local **Hilti Store** or online at: **www.hilti.group**.

7 Transport and storage

Transport

- Do not transport this product with an accessory tool installed.
- Make sure that the equipment is held securely throughout all transport operations.
- After transporting, always check all visible parts and controls for signs of damage and make sure that they all function correctly.

Storage

- Always store this product with the electric supply cable unplugged from the electricity supply.
- Store this product in a dry place, where it cannot be accessed by children or unauthorized persons.
- After a long period of storage, always check all visible parts and controls for signs of damage and make sure that they all function correctly.

8 Troubleshooting

If the trouble you are experiencing is not listed in this table or you are unable to remedy the problem by yourself, please contact **Hilti** Service.

8.1 Troubleshooting

Trouble or fault	Possible cause	Action to be taken
The breaker doesn't start.	Interruption in the electric supply.	 Plug in another electric tool or appliance and check whether it works.
	The electronic restart interlock is activated after an interruption in the electric supply.	 Switch the power tool off and then on again.





Trouble or fault	Possible cause	Action to be taken
The breaker doesn't start.	The generator is in sleep mode.	 Apply a load to the generator by connecting a second power consumer (e.g. worklight). Switch the tool off and then on again.
	A fault has occurred in the tool.	 Have the product repaired by Hilti Service.
	The carbon brushes are worn.	 Have checked by a trained elec- trical specialist and replaced if necessary.
No hammering action.	The power tool is too cold.	Bring the tip of the accessory tool into contact with the working surface, switch the power tool on and allow it to run. If necessary, repeat the procedure until the hammering mechanism begins to operate.
The breaker doesn't achieve full power.	The extension cord is too long or its gauge is inadequate.	 Use an extension cord of an approved length and / or of adequate gauge.
	The control switch is not fully pressed.	 Press the control switch as far as it will go.
The chisel cannot be released from the chuck.	The chuck is not pulled back fully.	 Pull the chuck back as far as it will go and remove the insert tool.
The service indicator blinks.	A fault has occurred in the tool.	Have the product repaired by Hilti Service.
The service indicator lights.	The carbon brushes are worn.	 Have checked by a trained elec- trical specialist and replaced if necessary.
	The tool is faulty or servicing is due.	Have the product repaired only by Hilti Service.

9 Disposal

M

Most of the materials from which **Hilti** tools and appliances are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, your old tools, machines or appliances can be returned to **Hilti** for recycling. Ask **Hilti** Service or your Hilti representative for further information.

> Do not dispose of power tools, electronic equipment or batteries as household waste!

10 RoHS (Restriction of Hazardous Substances)

The following links take you to the table of dangerous substances: qr.hilti.com/rxxx. You will find a link to the RoHS table, in the form of a QR code, at the end of this document.

11 Manufacturer's warranty

Please contact your local Hilti representative if you have questions about the warranty conditions.





הוראות הפעלה מקוריות

מידע על הוראות ההפעלה 1

על הוראות הפעלה אלו 1.1

- אזהרה! לפני השימוש במוצר יש לקרוא ולהבין את הוראות ההפעלה המצורפות למוצר, כולל ההערות, הוראות הבטיחות ٠ והאזהרות, האיורים והמפרטים. יש ללמוד במיוחד את כל הוראות הבטיחות, האזהרות, המפרטים והפונקציות השונות של המוצר. התעלמות מהנחיה זו מובילה לסכנת התחשמלות, שריפה ופציעות קשות. שמור את הוראות ההפעלה, כולל כל הוראות הבטיחות והאזהרות לצורך שימוש בעתיד.
- המוצרים של 💶־בוואם מיועדים למשתמש המקצועי, ורק אנשים מורשים, שעברו הכשרה מתאימה, רשאים לתפעל, לתחזק ולתקן אותם. אנשים אלה חייבים ללמוד באופן מיוחד את הסכנות האפשריות. המוצר המתואר והעזרים שלו עלולים להיות מסוכנים כאשר אנשים שלא עברו הכשרה מתאימה משתמשים בהם באופן לא מקצועי או כאשר משתמשים בהם שלא בהתאם לייעוד.
- הוראות ההפעלה המצורפות נכתבו בהתאם לידיעות הטכנולוגיות במועד השליחה לדפוס. את הגרסה העדכנית ביותר אפשר למצוא תמיד בדף המוצר של Hilti. כדי להגיע לשם, יש לסרוק את קוד ה-QR בהוראות ההפעלה האלה, מסומן בסמל 🚱.
 - אם אתה מעביר את המוצר לאדם אחר, מסור לו גם את הוראות ההפעלה האלה.

הסבר הסימנים 1.2

אזהרות 1.2.1

האזהרות מזהירות מפני סכנות בשימוש במוצר. במדריך זה מופיעות מילות המפתח הבאות:

סכנה A

סכנה !

א מציינת סכנה מיידית, המובילה לפציעות גוף קשות או למוות.

אזהרה

אדהרה

מציינת סכנה אפשרית, שיכולה להוביל לפציעות גוף קשות או למוות. ◄

זהירות 🥂

זהירות !

מציינת מצב שעלול להיות מסוכן ולהוביל לפציעות גוף או לנזקים לרכוש.

סמלים בהוראות ההפעלה 1.2.2

הסמלים הבאים מופיעים בהוראות הפעלה אלה:



Ŵ

הנחיות לשימוש ומידע שימושי נוסף טיפול נכון בחומרים למיחזור

אין להשליך לפסולת הביתית מכשירים חשמליים וסוללות

סמלים באיורים 1.2.3

הסמלים הבאים משמשים באיורים:

מספרים אלה מפנים לאיור המתאים בתחילת הוראות הפעלה אלה.	2
המספרים באיורים מפנים לשלבי עבודה חשובים או לרכיבים שחשובים לשלבי העבודה. שלבי עבודה אלה או רכיבים אלה מודגשים בטקסט במספרים מתאימים, לדוגמה (3) .	
מספרי הפריטים מופיעים באיור סקירה ותואמים את המספרים במקרא בפרק סקירת המוצר .	(11)
סימן זה אמור לעורר את תשומת לבך המיוחדת בעת השימוש במוצר.	•!





1.3 הסבר הסימנים

1.3.1 סמלים על המוצר

הסמלים הבאים מופיעים על המוצר:

חציבה 🕇	
-ָן- מיקום האזמל	
דירוג הגנה II (בידוד כפול) 🔲	
מהירות סרק נקובה N _O	
השתמש בכפפות מגן	

2 בטיחות

2.1 הוראות בטיחות כלליות לכלי עבודה חשמליים

אי אזהרה קרא את כל הוראות הבטיחות, ההנחיות, האיורים והנתונים הטכניים המצורפים לכלי העבודה החשמלי. אי 🚹 אי ציות להנחיות עלול להוביל להתחשמלות, לשרפה ו/או לפציעות קשות.

שמור את כל הוראות הבטיחות וההנחיות לעיון בעתיד.

המונח "כלי עבודה חשמלי" המשמש בהוראות הבטיחות מתייחס לכלי עבודה חשמליים המחוברים לרשת החשמל (עם כבל חשמל) או לכלי עבודה חשמליים המופעלים באמצעות סוללה נטענת (ללא כבל חשמל).

בטיחות במקום העבודה

- שמור על אזור העבודה שלך נקי ודאג לתאורה מספקת. חוסר סדר או תאורה לקויה במקום העבודה עלולים לגרום לתאונות.
- אין להפעיל את כלי העבודה החשמלי בסביבה שקיימת בה סכנת פיצוץ או שישנם בה נוזלים, גזים או אבק דליקים. כלי עבודה חשמליים יוצרים ניצוצות, שעלולים להצית את האבק או האדים.
- הרחק ילדים ואנשים אחרים מכלי העבודה החשמלי במהלך השימוש בו. אם דעתך תוסח אתה עלול לאבד את השליטה במכשיר.

בטיחות בחשמל

- תקע החשמל של כלי העבודה החשמלי חייב להתאים לשקע החשמל. אסור לשנות בשום אופן את תקע החשמל. אל תשתמש בשקע מתאם ביחד עם כלי עבודה חשמליים הכוללים הגנת הארקה. שימוש בתקעים חשמליים שלא עברו שינוי ושקעי חשמל מתאימים מפחית את הסיכון להתחשמלות.
- מנע מגע של הגוף בשטחים מוארקים כגון צינורות, גופי חימום, תנורים ומקררים. קיימת סכנה גבוהה להתחשמלות כאשר הגוף שלך מוארק.
 - הרחק כלי עבודה חשמליים מגשם או רטיבות. חדירת מים לכלי העבודה החשמלי מגדילה את הסיכון להתחשמלות.
- אל תשתמש בכבל החשמל למטרות שלא לשמן הוא נועד, לדוגמה: אל תרים את כלי העבודה החשמלי באמצעות הכבל ואל תנסה לנתק את התקע משקע החשמל במשיכה מהכבל. הרחק את הכבל מחום, שמן, פינות חדות או מחלקים נעים. כבלים שניזוקו או שהסתבכו בחלקים אחרים מגדילים את הסיכון להתחשמלות.
- כאשר אתה עובד עם כלי העבודה החשמלי בחוץ, השתמש רק בכבל מאריך המיועד לשימוש חיצוני. שימוש בכבל מאריך המתאים לשימוש חיצוני מפחית את הסיכוי להתחשמלות.
- אם לא ניתן להימנע משימוש בכלי העבודה החשמלי בסביבה לחה, השתמש בממסר פחת. השימוש בממסר פחת מפחית את הסיכון להתחשמלות.

בטיחות של אנשים

- היה ערני, שים לב למה שאתה עושה, ופעל בתבונה כאשר אתה עובד עם כלי עבודה חשמלי. אל תפעיל כלי עבודה חשמליים כשאתה עייף או תחת השפעת סמים, אלכוהול או תרופות. די ברגע אחד של חוסר תשומת-לב בזמן השימוש בכלי העבודה החשמלי כדי לגרום פציעות קשות.
- לבש תמיד ציוד מגן ומשקפי מגן. לבישת ציוד מגן אישי, כגון מסכת אבק, נעלי בטיחות מונעות החלקה, קסדת מגן או מגני שמיעה בהתאם לסוג השימוש בכלי העבודה החשמלי מקטינה את הסיכון לפציעות.
- מנע הפעלה בשוגג. ודא שכלי העבודה החשמלי כבוי לפני שאתה מחבר אותו לאספקת החשמל ו/או לפני שאתה מחבר את הסוללה ולפני הרמתו. אל תניח את אצבעך על המתג בזמן שאתה נושא את המכשיר ואל תחבר אותו לאספקת החשמל כאשר הוא מופעל, אחרת עלולות להיגרם תאונות.
- הרחק כלי כוונון או מפתחות ברגים לפני שאתה מפעיל את כלי העבודה החשמלי. כלי עבודה או מפתחות הנמצאים בקרבת חלקים מסתובבים עלולים לגרום פציעות.
- הימנע מתנוחות גוף לא נכונות. עמוד באופן יציב ושמור תמיד על שיווי משקל. כך תוכל לשלוט טוב יותר בכלי העבודה החשמלי במצבים לא צפויים.







- לבש בגדים מתאימים. אל תלבש בגדים רחבים או תכשיטים. הרחק את השער, הבגדים וכפפות מחלקים נעים. בגדים רופפים, תכשיטים ושיער ארוך עלולים להיתפס בחלקים נעים.
- כאשר ניתן להתקין התקני שאיבת אבק ולכידה יש לוודא שהם מחוברים לחשמל, ויש להקפיד להשתמש בהם בצורה נכונה. שימוש בהתקן שאיבת אבק מקטין את הסכנות הנובעות מהאבק.
- אל תהיה שאנן בנושאי בטיחות ואל תתעלם מהוראות בטיחות של כלי עבודה חשמליים, גם אם שהשתמשת במכשיר פעמים רבות ואתה מכיר אותו היטב. התנהגות רשלנית עלולה להוביל לפציעות קשות בתוך שניות.

שימוש וטיפול בכלי העבודה החשמלי

- אל תפעיל עומס רב מדי על המכשיר. השתמש בכלי העבודה החשמלי המתאים לעבודה שאתה מבצע. כלי העבודה החשמלי המתאים מבטיח לך עבודה טובה ובטוחה יותר בתחום ההספק הנקוב.
- א אל תשתמש בכלי העבודה אם המתג שלו אינו תקין. כלי עבודה חשמלי שלא ניתן עוד להפעיל או לכבות אותו מהווה סכנה ויש לתקנו.
- בתק את תקע החשמל מהשקע ו/או הסר את הסוללה לפני שאתה מבצע כוונונים במכשיר, מחליף כלים או לאחר שאתה מפסיק לעבוד עם המכשיר. אמצעי זהירות זה מונע הפעלה בשוגג של כלי העבודה החשמלי.
- שמור כלי עבודה חשמליים שאינם בשימוש הרחק מהישג ידם של ילדים. אל תאפשר לאנשים שאינם יודעים כיצד להשתמש במכשיר או שלא קראו את ההוראות להשתמש במכשיר. כלי עבודה חשמליים הם מסוכנים כאשר משתמשים בהם אנשים חסרי ניסיון.
- טפל בכלי עבודה חשמליים ובאביזרים בהקפדה. בדוק אם החלקים הנעים פועלים בצורה חלקה ואינם נתקעים, אם ישנם חלקים שבורים או מקולקלים המשבשים את הפעולה התקינה של כלי העבודה החשמלי. לפני השימוש במכשיר דאג לתיקון חלקים לא תקינים. תאונות רבות נגרמו עקב תחזוקה לקויה של כלי עבודה חשמליים.
 - א שמור על כלי החיתוך חדים ונקיים. כלי חיתוך מטופלים היטב, שלהביהם חדים נתקעים פחות וקלים יותר לתפעול.
- השתמש בכלי העבודה החשמלי, באביזרים, בכלי העבודה הנוספים וכן הלאה בהתאם להוראות אלה. התחשב בתנאי העבודה ובפעולה שעליך לבצע. שימוש בכלי העבודה החשמלי למטרות אחרות מאלה שלשמן הוא מיועד עלול להיות מסוכן.
- שמור על ידיות ואזורי אחיזה בקיים מלכלוך משומן ומגריז. ידיות ואזורי אחיזה חלקים אינם מאפשרים תפעול בטוח ושליטה טובה בכלי העבודה החשמלי במצבים לא צפויים.

שירות

דאג לתיקון כלי העבודה החשמלי שלך רק בידי טכנאים מוסמכים, המשתמשים בחלקי חילוף מקוריים בלבד. כך תבטיח שמירה על בטיחות העבודה במכשיר.

2.2 הוראות בטיחות לפטישונים

הנחיות בטיחות לכל העבודות

- השתמש במגני שמיעה. רעש חזק עלול לפגוע בשמיעה.
- השתמש בידיות האחיזה הנוספות המצורפות למכשיר. אובדן השליטה במכשיר עלול לגרום לפציעות.
- אחוד במכשיר במקומות האחידה המבודדים כאשר אתה מבצע עבודות שבהן כלי הקידוח עלול לפגוע בקווי חשמלי מוסתרים או בכבל החשמל של המכשיר. מגע בקווים המוליכים זרם עלול להעביר זרם גם לחלקים מתכתיים במכשיר שלך ולגרום להתחשמלות.

2.3 הוראות בטיחות נוספות

בטיחות של אנשים

- השתמש במכשיר רק בתנאי שהוא נמצא במצב טכני מושלם.
 - אל תבצע בשום אופן מניפולציות או שינויים במכשיר.
- בעבודות פריצה יש לאבטח את האזור בצד הנגדי של מקום העבודה שלך. חומרים מעבודות הפריצה עשויים ליפול ולפצוע אנשים אחרים.
 - אחוז את המכשיר היטב תמיד בשתי ידיים בידיות האחיזה שלו. שמור על ידיות האחיזה נקיות ויבשות.
 - אחוז תמיד בצד החיצוני של ידית האחיזה הצדית.
 - במהלך השימוש במכשיר יש ללבוש משקפי מגן, קסדת מגן, מגני שמיעה וכפפות הגנה כמו גם מסכת נשימה קלה.
 - לבש כפפות בטיחות גם בעת החלפת כלי. מגע בכלי עלול לגרום לפציעות ולכוויות.
 - השתמש במגני עיניים. שבבי חומר שניתזים עלולים לפצוע את הגוף והעיניים.
- בדוק לפני תחילת העבודה את דירוג הסכנה של אבק החומר שבו תעבוד. השתמש בשואב אבק מקצועי בעל דירוג הגנה מאושר, התואם את תקנות החוק הנוגעות להגנה מאבק.
- השתמש במערכת שאיבת אבק או בשואב אבק נייד היכן שרק ניתן. אבק של חומרים דוגמת צבעים המכילים עופרת, סוגי עץ מסוימים, בטון / קירות לבנים / אבנים המכילות קוורץ ומינרלים כגון מתכת עלולים להזיק לבריאות.
- דאג לאוורור טוב במקום העבודה, ובמקרה הצורך לבש גם מסכת נשימה המתאימה לסוג האבק שבו אתה עובד. נגיעה בסוגי אבק אלה או שאיפתם עלולה לגרום לתגובות אלרגיות ו/או למחלות בכלי הנשימה של המשתמש או של אנשים הנמצאים בקרבת מקום. סוגי אבק מסוימים, כגון אבק של אלון או בוק, נחשבים מסרטנים, במיוחד בשילוב עם חומרים אחרים המשמשים לטיפול בעץ (כרומט, חומר הגנה לעץ). רק מומחים רשאים לעבוד בחומרים המכילים אסבסט.
- ערוך הפסקות בעבודה ותרגילים לשיפור זרימת הדם לאצבעות. הרעידות מהמכשיר עשויות לאחר עבודה ממושכת לגרום להפרעות בכלי הדם או במערכת העצבים של האצבעות, כפות הידיים או שורשי כף היד.





בטיחות בחשמל

לפני תחילת העבודה יש לבדוק אם ישנם כבלי חשמל, צינורות גז או מים נסתרים. חלקים מתכתיים חיצוניים במכשיר יכולים לגרום להתחשמלות כאשר הם נוגעים בשוגג בקווי חשמל.

טיפול ושימוש קפדניים בכלי עבודה חשמליים

- אם הכלי נחסם יש לכבות מיד את המכשיר. המכשיר עשוי לסטות הצדה.
- המתן עד לעצירה מלאה של כלי העבודה החשמלי לפני שאתה מניח אותו.

תיאור 3

3.1 סקירת המוצר



- תפסנית 🛈
- בורר פעולות (2
- _____ 3 מתג הפעלה
- נעילת מתג ההפעלה 🌖
 - ידית אחיזה צדית 🚯
 - כפתור הידוק 🌀
 - חיווי טיפולים 🗍
 - לחצן נעילה 🛞
- חיבור במכשיר החשמלי 🧐
- כבל חשמל עם תקע מקודד, נשלף 🔟

3.2 שימוש בהתאם לייעוד

המוצר המתואר זהו פטישון חציבה חשמלי. הוא מיועד לעבודות חציבה בדרגת קושי בינונית בקירות ובבטון. ◄ מותר לחבר את המכשיר רק לרשת חשמל בעלת מתח ותדירות כמצוין על לוחית הדגם.

Active Vibration Reduction (AVR) 3.3

פטיש החציבה מצויד במערכת (Active Vibration Reduction (AVR), המפחיתה את הרעידות באופן משמעותי ביותר.

שימוש שגוי אפשרי 3.4

- מוצר זה אינו מיועד לעבודה בחומרים המהווים סכנה בריאותית.
 - מוצר זה אינו מיועד לעבודה בסביבה לחה.
- אסור להפעיל את המוצר באמצעות מתח רשת או תדירות רשת שונים מאלה המצוינים על לוחית הדגם של המוצר.

חיווי טיפולים 3.5

פטיש החציבה כולל חיווי טיפולים באמצעות נורה.

משמעות	מצב
הגיע מועד הטיפול במכשיר.	חיווי הטיפולים מאיר.
נזקים במוצר. פנה לשירות של Hilti כדי לתקן את המוצר.	חיווי הטיפולים מהבהב.





מפרט אספקה 3.6

-

2

פטיש חציבה, ידית אחיזה צדית, הוראות הפעלה.

www.hilti.group או בכתובת: Hilti Store מוצרים נוספים המאושרים עבור המוצר שלך תמצא ב-

נתונים טכניים 4

פטיש חציבה 4.1

את המתח הנקוב, הזרם הנקוב, התדירות וההספק הנקוב תמצא בלוחית הדגם הספציפית למדינתך.

בעת הפעלה באמצעות גנרטור או שנאי הספק המוצא שלהם חייב להיות לפחות כפול מההספק הנקוב המצוין על לוחית הדגם של המכשיר. מתח העבודה של השנאי או הגנרטור חייב להימצא תמיד בטווח שבין 5% לבין 15%- ביחס למתח הנקוב של המכשיר.

	TE 500-AVR
דור המוצר	03
משקל בהתאם להליך 01 EPTA	6.3 ק"ג

מידע על רעשים וערכי רעידות 4.2

ערכי לחץ הקול והרעידות המצוינים בהוראות אלה נמדדו בהתאם לנוהל המדידה התקני. וניתו להשתמש בהם לצורד השוואה ביו כלי עבודה חשמליים. הם מתאימים גם להערכה זמנית של העומסים.

הנתונים המצוינים תקפים לשימושים העיקריים בכלי העבודה החשמלי. אולם אם משתמשים בכלי העבודה החשמלי לשימושים אחרים, בשילוב אביזרים אחרים או אם המכשיר אינו עובר תחזוקה מספקת, הנתונים עשויים להשתנות. בעקבות זאת פריסת העומסים למשך זמן העבודה כולו עשויה להיות גבוהה באופן משמעותי.

לצורד הערכה מדויקת של העומסים יש לקחת בחשבוו גם את הזמנים שבהם כלי העבודה כבוי או שבהם הוא אמנם פועל אר אינו בשימוש בפועל. בעקבות זאת פריסת העומסים למשך זמן העבודה כולו עשויה להיות נמוכה באופן משמעותי.

יש לקבוע הנחיות בטיחות נוספות להגנה על המשתמש מפני ההשפעות של קול ו/או רעידות, כגון: תחזוקה של כלי העבודה החשמלי ושל כלי העבודה המחוברים, שמירה על ידיים חמות, ארגון תהליכי העבודה.

מידע מפורט על גרסאות תקני EN 62841 הישימים תמצא בתמונת הצהרת התאימות 江 🛨 21.

ערכי רעש

Т

	TE 500-AVR
רמת הספק קול (L _{wa})	104 dB(A)
אי-ודאות ברמת הספק הקול (K _{wa})	3 dB(A)
רמת לחץ קול (L _{PA})	96 dB(A)
(K _p ,) אי-ודאות ברמת לחץ קול	3 dB(A)

ערכי רעידות כוללים

חציבה (a _{h,Cheq})	2.8 מ'/שנ ^{י2}
אי-ודאות (ערך רעידות כולל)	1.5 מ'/שנ ^{י2}

תפעול 5

הכנה לעבודה 5.1

דהירות \wedge

סכנת פציעה! תחילת תנוע לא מכוונת של המוצר.

נתק את תקע החשמל לפני שאתה מבצע כוונונים במכשיר או מחליף אביזרים. •

ציית להוראות הבטיחות והאזהרות שבתיעוד זה ולאלה המצוינות על המוצר.





5.1.1 התקנת ידית האחיזה הצדית 🛿

זהירות <u> </u>

סכבת פציעה אובדן השליטה על פטיש החציבה.

- 🕨 ודא כי ידית האחיזה הצדית מותקנת בצורה נכונה ומהודקת היטב.
- .דחף את המחזיק (חבק) ואת ידית האחיזה הצדית מלפנים על פני התפסנית עד לחריץ המיועד.
 - .2 מקם את יחידת האחיזה הצדית במיקום המבוקש.
 - . סובב את המחזיק (חבק) של ידית האחיזה הצדית כדי להדק אותה. 3.

5.1.2 חיבור כבל חשמל נשלף

זהירות 🔬

סכנת פציעה עקב זרם דלף במגעים מלוכלכים.

יש לחבר חיבורים חשמליים נשלפים למכשיר רק במצב נקי, יבש וללא מתח.

- .1. תקע את התקע החשמלי הנשלף, המקודד במכשיר עד הסוף, עד שאתה שומע אותו ננעל.
 - .2 חבר את תקע החשמל לשקע רשת החשמל.

5.1.3 הכנסה/הוצאה של כלי

אזהרה \Lambda

סכנת פציעה הכלי מתחמם במהלך השימוש.

- לבש נעלי בטיחות בעת החלפת כלי. 🕨
 - .1 שמן קלות את הקנה של הכלי.
- .2 הכנס את קנה הכלי לתפסנית עד הסוף ואפשר לו להינעל.
 - המוצר מוכן לעבודה.
 - . משוך את נעילת הכלים אחורה עד הסוף והוצא את הכלי.

השתמש רק בגריז מקורי של Hilti. שימוש בגריז לא מתאים עלול לגרום נזק למוצר.

5.1.4 מיקום האזמל

זהירות 🔬

סכנת פציעה אבדן השליטה על כיוון החציבה.

אל תעבוד במצב "מיקום האזמל". העבר את בורר הפעולות למצב "חציבה" עד שהוא ננעל.

ניתן למקם את האזמל ב-24 מצבים שונים (מרווחים של 15°). כך ניתן לעבוד באזמלים שטוחים ומעוצבים במצב העבודה 🔢 הטוב ביותר.

- .-⊕ העבר את בורר הפעולות לעמדה זו.
 - .2 סובב את האזמל למיקום המבוקש.
- . העבר את בורר הפעולות לעמדה זו 🕇 עד שהוא נתפס בה. 3.
 - רמכשיר מוכן לעבודה. ◄

5.1.5 ניתוק כבל חשמל נשלף מהמכשיר החשמלי

- נתק את תקע החשמל משקע רשת החשמל.
- .2. לחץ על לחצן הנעילה ומשוך את התקע החשמלי הנשלף החוצה.
 - . נתק את כבל החשמל מהמכשיר.

עבודה 5.2

אזהרה 🛕

. סכנת התחשמלות! מוליך הארקה חסר ומפסק פחת חסר עשויים לגרום לפציעות קשות ולכוויות.

- ודא שבקווים החשמליים של אתר הבנייה שמגיעים מרשת החשמל או מהגנרטור ישנם תמיד מוליך הארקה ומפסק פחת מחוברים.
 - אל תפעיל אף מוצר ללא אמצעי בטיחות אלה. 🕨





אזהרה \Lambda

סכנה עקב כבל פגום! אם כבל החשמל או הכבל המאריך ניזוקו במהלך העבודה אסור לגעת בכבל. נתק את תקע החשמל משקע רשת החשמל.

🕨 בדוק באופן סדיר את כבל החשמל של המכשיר, ובמקרה שדיהית בזקים פנה לבעל מקצוע מורשה לצורך החלפתו.

בקש אישור לעבודות במלואן ממנהל האתר.

5.2.1 חציבה 5

•

. 🕇 העבר את בורר הפעולות לעמדה זו

5.2.2 כיבוי/הפעלה של פעולה רציפה 5

במצב חציבה ניתן לנעול את מתג ההפעלה/כיבוי כאשר המכשיר מופעל.

- .1 דחף קדימה לחצן העבודה הרציפה.
- .2 לחץ על מתג ההפעלה/כיבוי עד הסוף.
- המוצר פועל כעת במצב פעולה רציפה.
 - דחף לאחור את לחצן העבודה הרציפה.
 - המוצר כבה.

6 טיפול ותחזוקה

אזהרה 🥂

סכנת התחשמלות! עבודות טיפול ותחזוקה כאשר תקע החשמל מחובר לשקע עלולות להוביל לפציעות ולכוויות קשות. ◄ לפני ביצוע עבודות טיפול או תחזוקה כלשהן יש להקפיד ולנתק את תקע החשמל!

טיפול

- הסר בזהירות לכלוך שנדבק.
- נקה בזהירות את חריצי האוורור באמצעות מברשת יבשה.
- נקה את גוף המכשיר רק בעזרת מטלית לחה מעט. אין להשתמש בחומרי טיפול המכילים סיליקון, מאחר שהם עלולים לפגוע בחלקי הפלסטיק.

תחזוקה

אזהרה 🥂

סכבת התחשמלות! תיקון לא מקצועי של רכיבים חשמליים עלול לגרום לפציעות קשות ולכוויות.

- רק חשמלאים מורשים רשאים לבצע תיקונים ברכיבים חשמליים.
- יש לבדוק באופן סדיר את כל החלקים הגלויים כדי לאתר נזקים ולוודא שכל הרכיבים פועלים באופן תקין.
- אם ישנם נדקים ו/או תקלות אין להפעיל את המוצר. הבא מיד את המכשיר לתיקון במעבדת שירות של Hilti.
 - לאחר עבודות טיפול ותחזוקה יש להקפיד ולחבר את כל התקני ההגנה ולבדוק את תפקוד המכשיר.

לצורך הפעלה בטוחה של המכשיר יש להשתמש רק בחלקי חילוף וחומרים מתכלים מקוריים. את חלקי החילוף, החומרים המתכלים והאביזרים שאושרו על-ידנו עבור המוצר שלך תמצא ב-**Hilti Store** שלך או בכתובת: www.hilti.group.

הובלה ואחסון 7

הובלה

- אין להוביל את המוצר כאשר מחובר אליו כלי עבודה.
 - 🕨 ודא שהמכשיר יציב בהובלה.
- א לאחר כל הובלה בדוק את כל החלקים הגלויים לאיתור נזקים ובדוק תפקוד תקין של כל רכיבי ההפעלה.

אחסון

- יש להקפיד לנתק את התקע לפני האחסון. 🕨
- ◄ יש לאחסן מוצר זה במקום יבש הרחק מהישג ידם של ילדים ואנשים לא מורשים.
- א לאחר כל אחסון ממושך בדוק את כל החלקים הגלויים לאיתור נזקים ובדוק תפקוד תקין של כל רכיבי ההפעלה.





7 תיקון תקלות 8

אם מתרחשת תקלה שאינה מוסברת בטבלה זו או שאינך יכול לתקן בעצמך, פנה לשירות של Hilti.

תיקון תקלות 8.1

תרון	פו	סיבה אפשרית	תקלה
חבר מכשיר חשמלי אחר ובדוק אם הוא פועל.	٩	אספקת החשמל נותקה.	פטיש החציבה אינו מתחיל לפעול.
כבה את המכשיר והדלק אותו מחדש.	٩	חסימת ההפעלה האלקטרונית נכנסה לפעולה לאחר ניתוק החשמל.	
העמס על הגנרטור באמצעות צרכן שני (כגון תאורת אתר בנייה). לאחר מכן כבה את המכשיר והדלק אותו מחדש.	•	גנרטור במצב שינה.	
פנה לשירות של Hilti כדי לתקן את המוצר.	٩	נזקים למכשיר.	
מסור לחשמלאי לבדיקה, ובמקרה הצורך החלף.	٩	מברשות פחם נשחקו.	
הצמד את פטיש החציבה לחומר ואפשר לו לעבוד במצב סרק. חזור על הפעולה לפי הצורך עד שמערכת ההלימה מתחילה לעבוד.	•	המכשיר קר מדי.	אין הלימה.
השתמש בכבל מאריך באורך נכון ו/או בעל קוטר גדול מספיק.	٩	הכבל המאריך ארוך מדי ו/או הקוטר שלו קטן מדי.	פטיש החציבה אינו פועל בעוצמה מלאה.
לחץ על מתג ההפעלה עד הסוף.	٩	מתג הפעלה לא נלחץ עד הסוף.	
משוך את נעילת הכלים לאחור עד הסוף והוצא את הכלי.	•	התפסנית לא נמשכה לאחור עד הסוף.	לא ניתן לשחרר את האזמל מהנעילה.
פנה לשירות של Hilti כדי לתקן את המוצר.	٩	נזקים למכשיר.	חיווי הטיפולים מהבהב.
מסור לחשמלאי לבדיקה, ובמקרה הצורך החלף.	•	מברשות פחם נשחקו.	חיווי הטיפולים מאיר.
הבא את המכשיר לתיקון במעבדות שירות של Hilti בלבד.	٩	נדקים למכשיר או הגיע מועד טיפול.	

9 סילוק

🚱 המוצרים של Hilti מיוצרים בחלקם הגדול מחומרים ניתנים למיחזור. כדי שניתן יהיה למחזרם דרושה הפרדת חומרים מקצועית. במדינות רבות Hilti תקבל את המכשיר הישן שלך בחזרה לצורך מיחזור. פנה לשירות של Hilti או למשווק.

אין להש 🖣 🕅

אין להשליך כלי עבודה חשמליים, כלים אלקטרוניים וסוללות לפסולת הביתית!

RoHS (תקנה להגבלת השימוש בחומרים מסוכנים)

בקישורים הבאים תמצא את טבלת החומרים המסוכנים: qr.hilti.com/rxxx. קישור לטבלת RoHS תמצא בסוף תיעוד זה, בצורת קוד QR.

אחריות יצרן 11

אם יש לך שאלות בנושא תנאי האחריות, אנא פנה למשווק Hilti הקרוב אליך.













CE

en Declaration of conformity

Declaration of conformity

The manufacturer declares, on his sole responsibility, that the product described here complies with the applicable legislation and standards.

The technical documentation is filed here:

Hilti Entwicklungsgesellschaft mbH | Tool Certification | Hiltistrasse 6 | D-86916 Kaufering, Germany

Product information

Breaker	TE 500-AVR	
Generation	03	
Serial no.	1-99999999999	

Option: Details on 2000/14/EG

Details on 2000/14/EG:

Measured sound power level (L_{wa}): 94 dB(A)

Guaranteed sound power level (L_{WAd}): 103 dB(A)

Conformity assessment procedure in accordance with Annex VI

Notified body No. 0044: TÜV NORD CERT GmbH, Am TÜV 1, 45307 Essen, Germany



he הצהרת תאימות

הצהרת תאימות

היצרן מצהיר באחריותו הבלעדית כי המוצר המתואר כאן עונה על דרישות החוק התקפות והתקנים התקפים. התיעוד הטכני שמור כאן:

Hilti Entwicklungsgesellschaft mbH | Zulassung Geräte | Hiltistraße 6 | 86916 Kaufering, Germany

נתוני המוצר

פטיש חציבה	TE 500-AVR
דור	03
מס' סידורי	999999999999-1

2000/14/EG אפשרות: פרטים על

ופרטים על 2000/14/EG:

רמת הספק קול שנמדדה (L_{wa}): (94 dB(A)

רמת הספק קול מובטחת (L_{wad}): (103 dB(A)

VI הליך הערכה של התאימות על פי נספח

TÜV NORD CERT GmbH, Am TÜV 1, 45307 Essen, Germany :0044 מוסד הבדיקה המצוין מס'



EN IEC 62841-2-6:2020/A11:2020 EN IEC 55014-2:2021 EN 61000-3-3:2013, A1:2019, A2:2021, A2:2021/AC:2022

Hilti Corporation Feldkircherstraße 100 9494 Schaan | Liechtenstein

TE 500-AVR (03)

2006/42/EC 2014/30/EU 2011/65/EU 2000/14/EC EN 62841-1:2015, AC:2015, A11:2022 EN IEC 55014-1:2021 EN IEC 61000-3-2:2019, A1:2021

Schaan, 29.03.2024

Dr. Tahar Zrilli Head of Quality and Process Management Business Area Electric Tools & Accessories

Enj2P.

Edward-Louis Przybylowicz Head of BU Power Tool & Accessories Business Area Electric Tools & Accessories





UK Declaration of Conformity en

Declaration of conformity

The manufacturer declares, on his sole responsibility, that the product described here complies with the applicable legislation and standards.

The technical documentation is filed here:

Hilti Entwicklungsgesellschaft mbH | Tool Certification | Hiltistrasse 6 | D-86916 Kaufering, Germany

Product information

Breaker	TE 500-AVR		
Generation	03		
Serial no.	1-99999999999		

Option: Details on 2000/14/EG

Details to Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001:

Measured sound power level (L_{WA}): 94 dB(A)

Guaranteed sound power level (L_{wad}): 103 dB(A)

Conformity assessment procedure according to Annex VI

UK Approved Body Nr. 0044: HORIBA MIRA Certification Ltd Watling Street, Nuneaton, Warwickshire CV10 0TU (No 0888)

Manufacturer: Hilti Corporation Feldkircherstraße 100 9494 Schaan | Liechtenstein

TE 500-AVR (03)

Supply of Machinery (Safety) Regulations 2008

Electromagnetic Compatibility Regulations 2016

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001

Schaan, 29.03.2024

4

Dr. Tahar Zrilli Head of Quality and Process Management Business Area Electric Tools & Accessories

UK Importer: Hilti (Gt. Britain) Limited No. 1 Circle Square, 3 Symphony Park Manchester, England, M1 7FS

EN 62841-1:2015, AC:2015, A11:2022 EN IEC 55014-1:2021 EN IEC 61000-3-2:2019, A1:2021



EN IEC 62841-2-6:2020/A11:2020 EN IEC 55014-2:2021 EN 61000-3-3:2013, A1:2019, A2:2021, A2:2021/AC:2022

En 126-

Edward-Louis Przybylowicz Head of BU Power Tool & Accessories Business Area Electric Tools & Accessories

















Hilti Corporation LI-9494 Schaan Tel.:+423 234 21 11 Fax:+423 234 29 65 www.hilti.group



